
NISSAN
QASHQAI 2014

USB and Jack 3,5mm replacement PCB



Slide the rear plastic saved before until it hooks the front part.

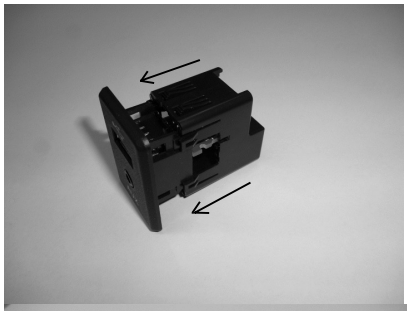

This is the final result. Connect the wiring to the connector and verify the proper functioning of the system.



05/2014 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.

All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.


Installation Manual




Take the original part.
Some plastic parts need to be removed and used with the new interface.




In order to unhook the rear plastic, use a screwer by leveraging on the 2 small clips on both sides, as shown in the picture.

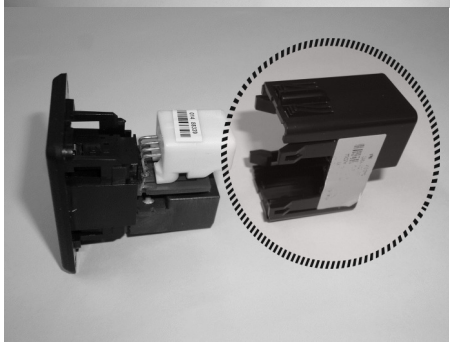

Remove and save the rear plastic.

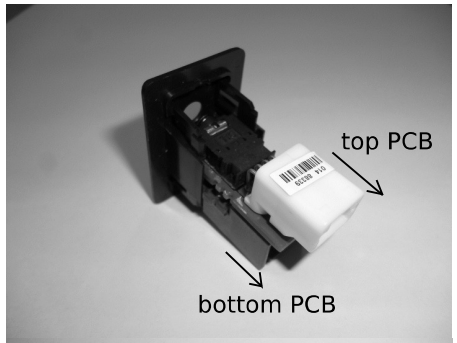

Slide out the top and bottom original PCB.

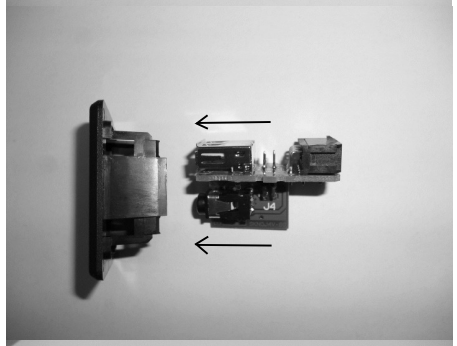

Take the new PCB and slide it into the original housing.



This is how it looks like before doing the last step.

All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.